




APEX 3WD BRAKE ASSEMBLY INSTRUCTIONS

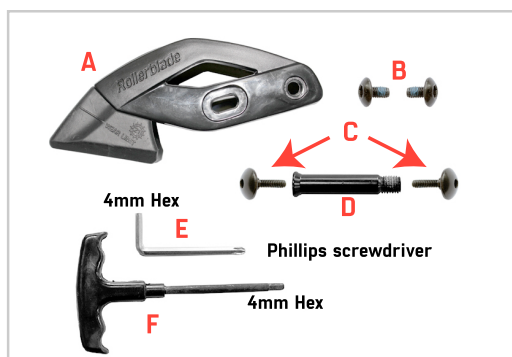


- A)** Brake support & pad (1x)
- B)** M4 x 7.5mm screw (2x)
- C)** M4 x 13.5mm screw (2x)
- D)** M7x34mm axle, internal M4 thread (1x)
- E)** Hex/Phillips wrench (1x)
- F)** 4mm hex skate tool (1x)

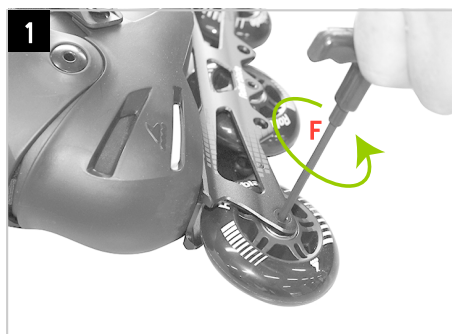


1 Remove the rear wheel axle with the hex skate tool (F)

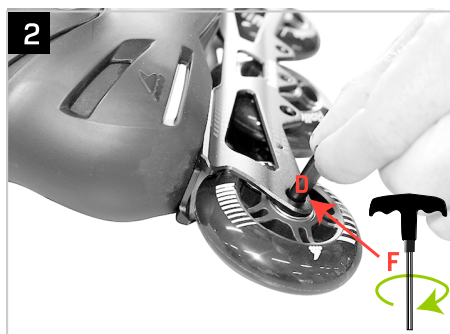


2 Insert M7x34mm axle (D) and tighten it with hex skate tool (F)

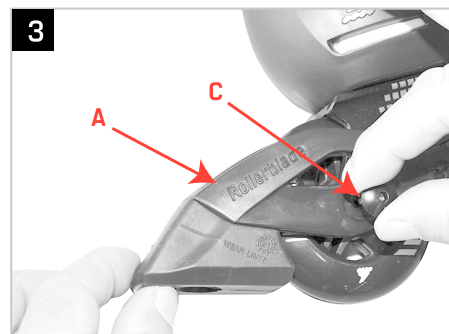


3 Attach brake support (A), insert M4 screw (C), into M7 axle (D). Repeat on other side of the skate

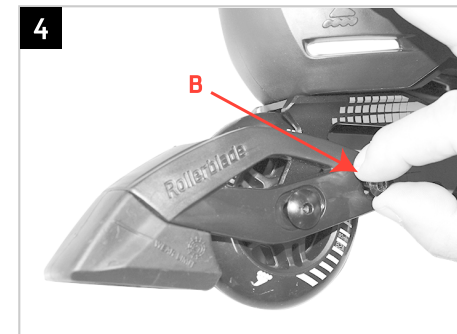

4 Insert M4x7.5mm screw (B). Repeat on other side of the skate

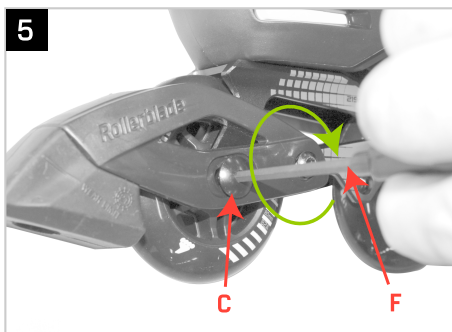

5 Tighten M4 screws (C) with hex skate tools (F) on both sides of the skate

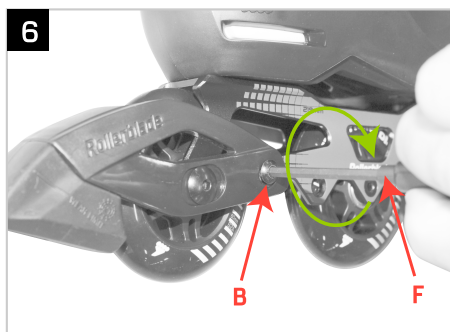

6 Tighten the M4x7.5mm screws (B) with hex skate tool (F) on both sides of the skate